 


SHARP

OPERATION MANUAL

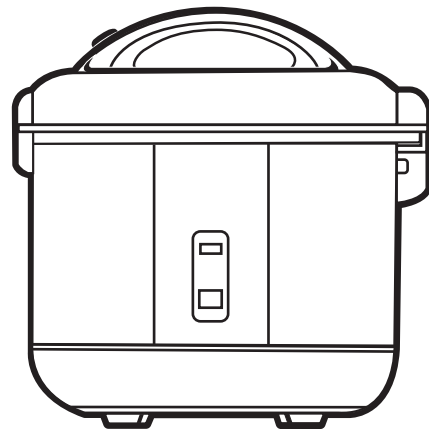

ELECTRIC JAR RICE COOKER NEW WAVE SERIES “S” MODEL KS-R18ST

CONTENTS	PAGE
USAGE PRECAUTIONS	10
DESCRIPTION OF PARTS	11
SPECIFIC INFORMATION	12
HOW TO USE	12-13
HOW TO STEAM FOOD (USING THE STEAM RACK)	14
EARTH WIRE ASSEMBLY	15
CLEANING AND MAINTENANCE	16

Please see the date of manufacture marked on the product
Thank you for your trust in products of Thai City Electric Co., Ltd.
In order to use electric jar rice cooker in efficiency way. Please
read the instructions manual carefully before using this appliance.

REV.1-2560

USAGE PRECAUTIONS

Please read the warning and cautions carefully before using this appliance and comply strictly for your own safety and to prevent the damage that may occur on your property.

- The appliance is to be supplied through a residual current device(RCD) having a rated residual operating current not exceeding 30 mA.
- This appliance is considered to be suitable for use in countries having a warm damp equable climate. It may also be used in other countries.

 
 
WARNING

- Do not immerse the set in water or sprinkling water on the heater plate.
- Do not use the cooker on a wet floor, under direct sunlight or near the gas stove.
- While cooking, do not put the rice cooker on or near combustible materials such as curtains or vinyl carpets.
- During or immediately after cooking, the areas near the steam vent hole are kept at high temperature. Do not touch those areas to avoid burns.
- Do not place a wiping cloth or the like on the lid or the handle during use.
- Never connect the plug with your wet hand as it may be dangerous from electric leakage. Disconnect the plug from the wall outlet when you do not use the rice cooker.
- Do not use any other inner pot except the provided one.
- Keep the rice cooker out of the children's reach, especially when cooking rice.
- Never share the wall outlet with other appliances.
- Do not opening the lid when during boiling because touched hot steam.
- Do not disassemble or repair the cooker by yourself. It may cause trouble such as a fire or electric shock. Consult your nearest dealer.
- In case the power cord is broken, it must be replaced by manufacturer or appointed service providers or equivalent professionals to avoid any damages.

CAUTIONS

- Insert the plug into the wall outlet firmly and when disconnecting, hold the plug and pull it out without touching the power cord.
- Do not give strong vibration or impact during cooking. It may cause an irregular operation of thermostat to lead to poor rice-cooking.
- Do not use the inner pot with other heating appliances such as a gas stove. The inner pot may be transformed and it may cause poor cooking result.
- Do not use metal spoon that can scratch the inner pot.
- Always keep clean the flange part and the bottom of the inner pot, the heater plate and the inner lid, etc. so that they do not accumulate rice grain or foreign matter.

DESCRIPTION OF PARTS

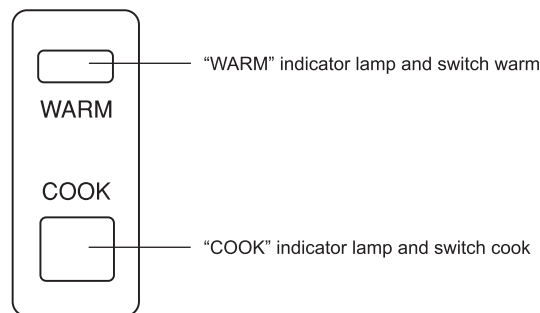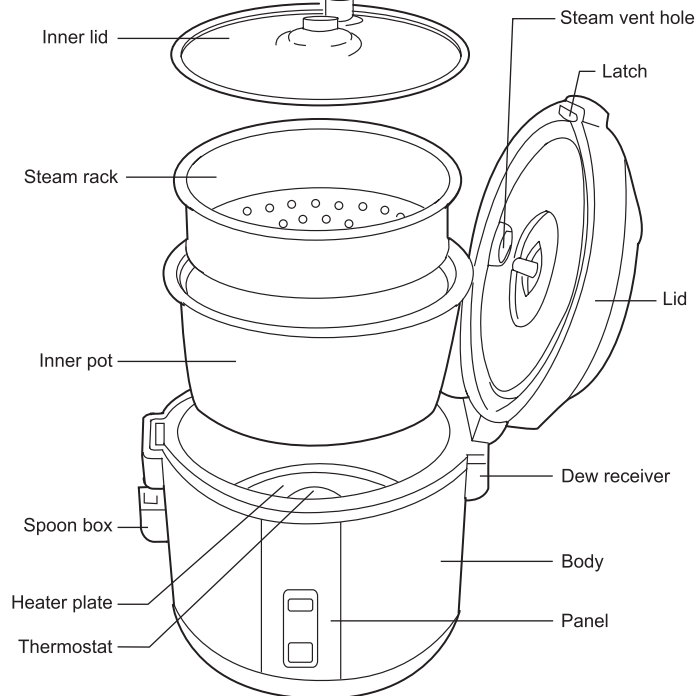

SPECIFIC INFORMATION

MODEL		KS-R18ST	
Rated voltage (V)		220	
Rated frequency (Hz)		50	
Power consumption (W)	Cook		600
		Max.	60
	Warm	Average	28
Capacity (ℓ)		0.54-1.8	
Outside dimension (mm.)	W	308	
	H	306	
	D	285	
Weight (kg)		3.2	
Safety system		Thermal fuse	
Accessories		Steam rack, measuring cup, plastic spoon and spoon box	

* Detail is subject to change without prior notice.

HOW TO USE

Be sure that the rated voltage is 220V only before use.

- Measure the volume of rice correctly.
(The volume of the attached measuring cup is about 0.18 ℓ or 180 cc.)

 


- Wash the rice in a separate bowl, put the rice into the inner pot and add water.

- Place rinsed rice into the inner pot and pour water at its level.

Example


- To cook 6 cups rice, pour water to level of 6.




- Place the inner pot on the heater plate correctly by turning it slightly from left and right.

Note

 - Before putting in, wipe off the moisture, dirt or rice grains on the outside of the inner pot or surface the heater plate.

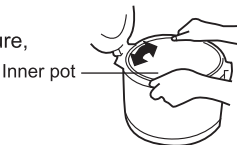

 
- Insert the steam tube of the inner lid into the steam vent hole of the lid cover. Close the lid firmly.

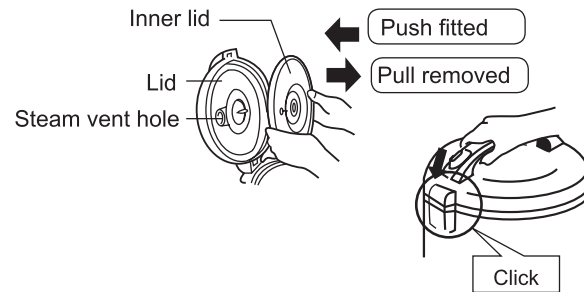

- Pull out the plug and insert the plug into the wall outlet. Do not overdraw beyond the red mark.

Retracting

 
- Pull the plug out a little and it automatically reels in.

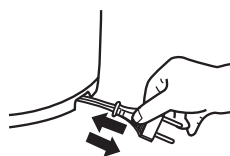

- Push the switch cook.


Note

 - When cooking is over, the "COOK" indicator lamp goes off and then the "WARM" indicator lamp lights on to start steaming. Keep on steaming without opening the lid for about 10-15 minutes for tastier and softer rice.

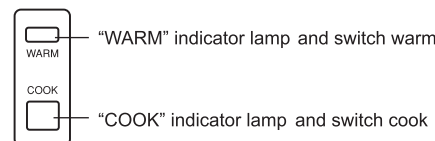

- Do not leave the plastic spoon in the inner.

 
- Disconnect the plug from the wall outlet every time after use.

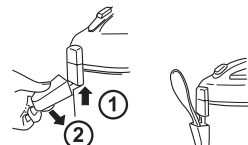

Installation of spoon box

HOW TO STEAM FOOD (Using the steam rack)

 - Put water into the inner pot. (The water level may need adjustment depending on capacity and the food).

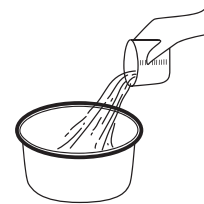

- Place the steam rack on the inner pot.



- Place foods you required on top of the steam rack and place the inner pot into the cooker. (Wipe the outside of the inner pot to remove extra substance before placing the inner pot into the body).



Cooking with steam rack : The volume of rice maximum 5 cups (0.9 ℓ).

TIME OF STEAM FOOD


Water volume 1 cup = 180 cc.	Time (Approx.) min
1/2 cup	11
1 cup	19
2 cups	31
3 cups	49

SPECIFICATIONS OF STEAM RACK

Material	Polypropylene
End user temperature (Max) °C	105

EARTH WIRE ASSEMBLY

 - Unplug before assemble the earth wire.
- Remove the inner pot from the rice cooker.
- Upside down the rice cooker.
- Remove the screw for earth wire about 2-3 mm. (Symbol ⊥) and insert earth wire ass'y and fasten screw for earth wire.

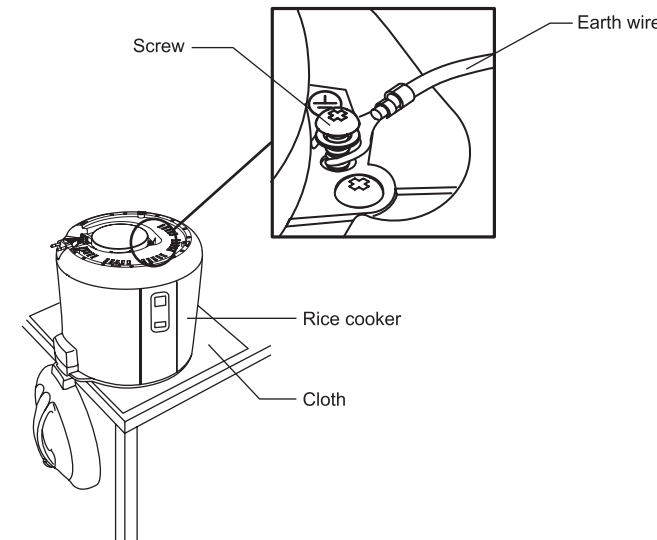

SPECIFICATIONS

Warming system

- The automatic warming system will start. The heat will be spreaded throughout the rice. The system will keep the rice temperature during 70-76°C that will make cooked rice warm and tasty.
- The steam rack use all most.
- The inner pot with poly-flon coat.
- Safety with the thermal fuse system.

Note

If the cooked rice is cold and needs warming, unfasten the rice and sprinkle some water on the rice, push the switch cook and wait until "COOK" indicator lamp goes off, then the "WARM" indicator lamp lights on. Keep on warming rice to along time, time of warming begin to the volume of rice.

CLEANING AND MAINTENANCE

After disconnecting the plug from the wall outlet and cooling down the cooker, start cleaning as shown below.

Parts to clean	How to clean	Caution
HEATER PLATE	Use the damp fine sandpaper to clean the dirty area and wipe out with sponge or damp cloth, then wipe again with the dry cloth to remove the humidity.	Rice grains and dusts that attached on the heater plate cause the inefficiently operation of the heat spread between the inner pot and heater plate. This may cause the switch cook stop work before its time and rice is not yet done.
INNER POT STEAM RACK INNER LID	Soak inner pot, steam rack and inner lid in lukewarm water and wash with sponge, washing detergent or liquid detergent and then wipe dry cloth.	Using metal-brush or nylon-brush make the inner pot and steam rack surface scratchy and this cause the removal of coating substance and rice attached at the bottom of the inner pot.
BODY AND LID	Wash with sponge and wipe with cloth to dry it.	Do not use metal-brush to clean the body and lid because it will scratch the coating substance of the surface.
DEW RECEIVER	Take off the dew receiver, wash with sponge brush and wipe with cloth to dry it.	Always clean the dew receiver in order to protect the smell from the remaining materials.

Sole Distributor in Thailand

THAI CITY ELECTRIC
THAI CITY ELECTRIC CO., LTD.
1643/4 New Petchburi Rd., Makasan, Ratchathewi, Bangkok 10400
Tel. 0 2333 3111 Call Center 0 2264 5000
E-mail : callcenter@thaicity.co.th

คิดบวก ทำบวก
เพื่อเด็กฯ และสังคมไทย
www.thaicity4social.com

www.thaicity.co.th
www.sharp-weedub.com
www.facebook.com/sharpweedub