### **USAGE PRECAUTIONS**

Please read the warning and cautions carefully before using this appliance and comply strictly for your own safety and to prevent the damage that may occur on your property.


# WARNING

- 1 If the electric fan is wrong operating, never repair by yourself. For safety and efficient use, contact your nearest service center approved by SHARP.
- 2 In case the power cord is broken, it must be replaced by SHARP service center to avoid any damages.
- 3 Unplug every time before start to clean the parts or when you do not use the electric fan anymore.
- 4 Do not immerse the electric fan in water or sprinkling water because this could lead to a short circuit or equipments broken.
- 5 Do not insert the finger or any objects through the grille while the blade is
- 6 Do not spray any vapor or chemicals to the electric fan while the blade is rotating.
- 7 Do not use the electric fan with incomplete or broken parts such as grille or blade, as it may cause injury.

# **CAUTIONS**

- 1 Plug in tightly in order to avoid the plug to be overheated. This can cause the plastic to be melted, and conflagrated. When unplugging, hold only the plug part; do not pull the cable as this may cause the cable broken.
- 2 Never connect the plug with your wet hand as it may be dangerous from electric leakage.
- 3 Never share the wall outlet with other appliances.
- 4 Should not use the electric fan close to curtain, mosquito net or any objects which could be pulled to the motor, otherwise this may cause accident and
- 5 Should not use the electric fan at the high temperature place such as placing it close to the stove or the high humidity place, as the unit might be damaged.
- 6 Should not place the electric fan on the hot or sloped floor, as the unit might be damaged.

### DESCRIPTION OF PARTS

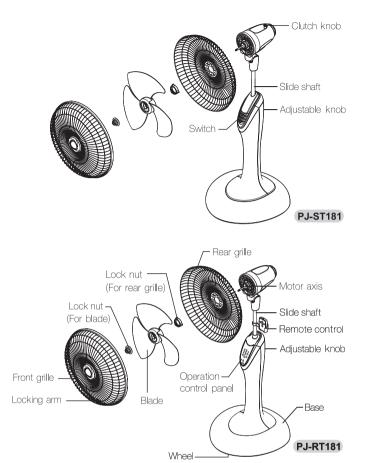

# SPECIFIC INFORMATION

MODEL	PJ-ST181	PJ-RT181
Blade (mm.)	450	
Rated voltage (V)	220	
Rated frequency (Hz)	50	
Power consumption (W)	67	69
Rated current (A)	0.30	0.31
Insulation class	В	
Outside dimension (WxHxD) (mm.)	513x1,340-1,540x498	
Weight (kg)	8.6	8.8

\*Detail is subject to change without prior notice.


## **BLADE AND GRILLE ASSEMBLING PROCESS**

ASSEMBLING THE ELETRIC FAN

Installation the body onto the base.

MODEL PJ-ST181, PJ-RT181

. Remove 2 screws from the unit.

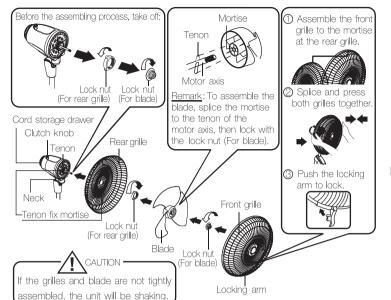

not switch on the electric fan unless

ne base is assembled (as the unit might

all and cause injured).


# **USE INDICATION**

 Be sure that the rated voltage is 220V only before use.

- Plug in tightly.
- Push the switch for the desired fan speed.

# Swing direction:

Press or push the motor unit up or down.



Push the motor unit to the left or right




To store the cord, roll the cord around the cord storage at the back of the fan.




# Model PJ-ST181

  Swing control:


- Push the knob : the unit swings





# HEIGHT ADJUSTMENT

 
- Level up by unlock the adjustable knob and at the same time, lift the slide shaft and lock.
- Level down by unlock the adjustable knob and at the same time, push the slide shafand lock.



direction in 5 strokes.




 • Pull the knob: the unit stop swinging.




### Model PJ-RT181
  
# Switch Operating System







# 1.) ON/OFF: ON / OFF button switch for the fan. The strongest speed of wind is in level 1 To turn on the fan, press ON button and the red light will always show on position 2 firstly.

After a while, the light will be back to position 1.

- If the fan is left for plugging in, it will always return to the last working status before being turned off.
- When the plug is removed, the functions of the fan will be canceled.
- (2) SPEED: Button for wind speed adjustment including 3 levels 1, 2, 3
- 3. TIMER: Operating timer setting is 1 hr., 2 hr., 4 hr., 8 hr. looping respectively. The status indicator light will display the operating hour decreasingly as the time passes. And when the operation is canceled, all the indicator lights will be off.
- 3.1. Turn-Off time setting: Press the timer button while the fan is running to set the turn-off time.
- 3.2. Turn-On time setting: Press the timer button while the fan is not running (but plugging in) to set the turn-on time. It will always start running at the last working status before being turned off.
- (4.) SWING: Press the button for left-right swinging adjustment, and press it again to stop swinging.
- (5.) NATURAL WIND: Button for turning on / off the natural wind system which can control the speed of the wind in strong-mild level automatically. The airflow can be controlled by 3 levels of speeds.
- 6) The status indicator light of natural wind operation system
- 7) The status indicator light of timing system
- (8) The status indicator light of wind speed in level 1, 2, 3 respectively
- (9) RECEIVER: The receiving remote sensor (O) TRANSMITTER: The transmitting remote sensor

### Remote Control


Usable by the symbol shown on the panel, while pressing the button, face the transmitter toward the remote sensor on switching panel of the fan. While in use, there shouldbe no obstructions between the receiver and the transmitter.

MANUFACTURED BY WESTERN APPLIANCES CO., LTD. 97 Moo 20 Sala Daeng, Bang Nam Priao, Chachoengsao 24000

# 12

## Battery Replacement

- 1. Press the remote cover and push it open-shut by the direction of the arrow.
- 2. Insert 2 pieces of AAA 1.5V batteries into the battery holder.
- 3. Keep the remote control in the proper place, beware of loss.

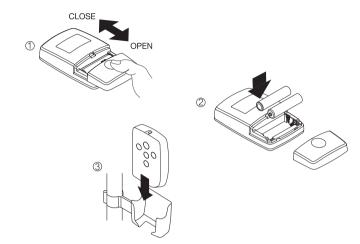

### Do not store decadent batteries in the remote unit.

- If the remote control dose not work, check if the batteries run out or not.
- Make sure that the battery anode and cathode is placed exactly as specified.

# **CLEANING AND MAINTENANCE**

### Unplug every time before start to clean the part.

Blade, front grille and rear grille

• Dissemble, and wipe with damp cloth use cleaning agent mixed with water then dried up with the cloth.

Wipe with damp cloth using water or mild soapy liquid.

### Remote Control

- Use the remote control carefully. Do not drop.
- If you do not want to use the remote control, remove the batteries.

- Do not wet electric parts or motor.
- Do not clean with chemical substance, thinner and kerosene etc, as this might damage the surface and/or shape of unit.

คิดบวก ทำบวก เพื่อเด็กๆ และสัมคมไทย

### Sole Distributor in Thailand



13

# Thank you for your trust in products of Thai City Electric Co., Ltd.

CLEANING AND MAINTENANCE

In order to use electric fan in efficiency way. Please read the instructions manual carefully before using this appliance.

Please see the date of manufacture marked on the product

**SHARP** 

**OPERATION MANUAL** 

**ELECTRIC FAN** 

MODEL PJ-ST181

PJ-RT181

PAGE

11

11

CONTENTS

USAGE PRECAUTIONS

DESCRIPTION OF PARTS

SPECIFIC INFORMATION

ASSEMBLING PROCESS

HEIGHT ADJUSTMENT

USE INDICATION

ASSEMBLING THE ELECTRIC FAN

BLADE AND GRILL

REV.2-2561







Screw for the base

3. Connect the body to the base and tighten 2 screws.

2. Insert the locking tenon into the fixing receptacle of the base, then pull

Press the body on the base, the unit must not press down on the cable.

the plug out of the base through the hole at the back of the base.



