

## USAGE PRECAUTIONS

Please read the warning and cautions carefully before using this appliance and comply strictly for your own safety and to prevent the damage that may occur on your property.

 
### WARNING

- 1 If the electric fan is wrong operating, never repair by yourself. For safety and efficient use, contact your nearest service center approved by SHARP.
- 2 In case the power cord is broken, it must be replaced by SHARP service center to avoid any damages.
- 3 Unplug every time before start to clean the parts or when you do not use the electric fan anymore.
- 4 Do not immerse the electric fan in water or sprinkling water because this could lead to a short circuit or equipments broken.
- 5 Do not insert the finger or any objects through the grille while the blade is rotating.
- 6 Do not spray any vapor or chemicals to the electric fan while the blade is rotating.
- 7 Do not use the electric fan with incomplete or broken parts such as grille or blade, as it may cause injury.

### CAUTIONS

- 1 Plug in tightly in order to avoid the plug to be overheated. This can cause the plastic to be melted, and conflagrated. When unplugging, hold only the plug part; do not pull the cable as this may cause the cable broken.
- 2 Never connect the plug with your wet hand as it may be dangerous from electric leakage.
- 3 Never share the wall outlet with other appliances.
- 4 Should not use the electric fan close to curtain, mosquito net or any objects which could be pulled to the motor, otherwise this may cause accident and damage.
- 5 Should not use the electric fan at the high temperature place such as placing it close to the stove or the high humidity place, as the unit might be damaged.
- 6 Should not install the electric fan on an incline wall or in a way that the unit is turned downward otherwise, as the unit might be damaged.

## DESCRIPTION OF PARTS

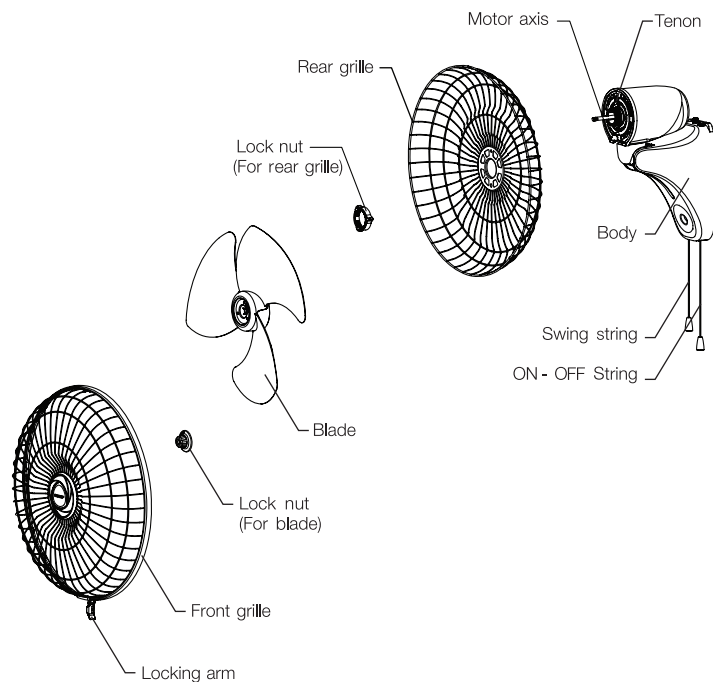


## SPECIFIC INFORMATION

MODEL	PJ-WA181
Blade (mm.)	450
Rated voltage (V)	220
Rated frequency (Hz)	50
Power consumption (W)	69
Electric current (A.)	0.31
Insulation class	B
Outside Dimension (W×H×D) (mm.)	519 x 585 x 407
Weight (Kg)	4.8

\*Detail is subject to change without prior notice.
 
## BLADE AND GRILLE ASSEMBLING PROCESS

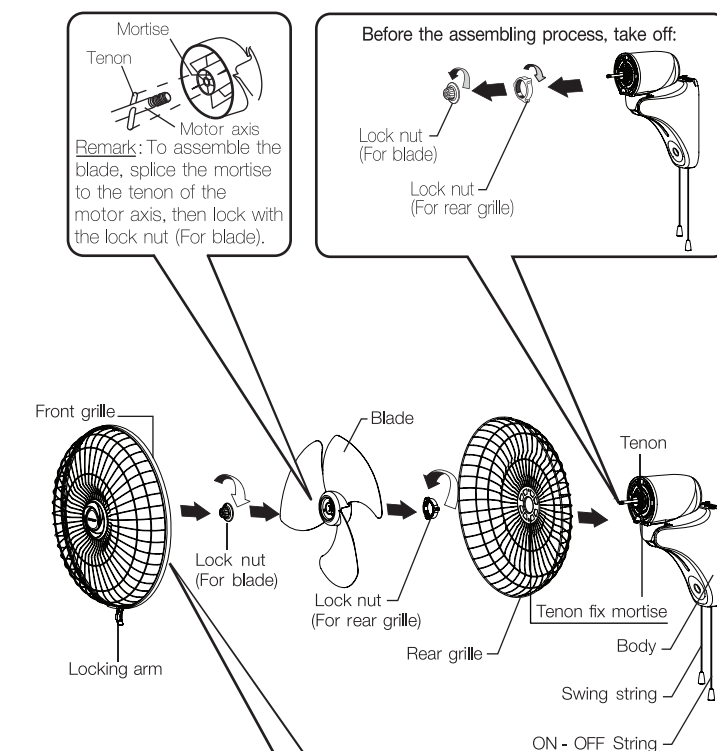

### Assemble the front grille.

- 1 Assemble the front grille to the mortise at the rear grille.
- 2 Splice and press both grilles together.
- 3 Push the locking arm to lock.

 


**CAUTION**  
If the grilles and blade are not tightly assembled, the unit will be shaking.

## INSTALLATION GUIDES

### Preparation for installation area

- Space needed for installation.

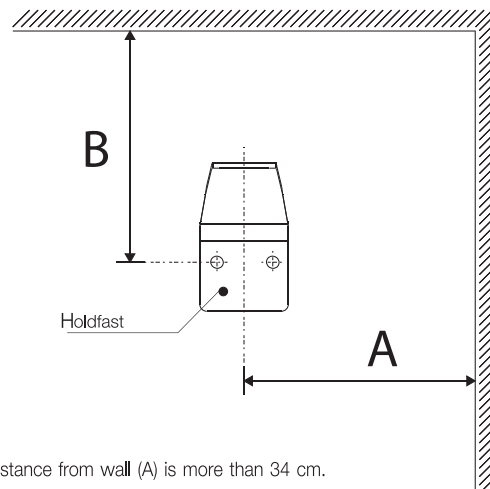


- The distance from wall (A) is more than 34 cm.
- The distance from ceiling (B) is more than 48 cm.



- The unit should be installed or fixed on the wall with strong structure, which is able to support the fan's weight of not less than 40 kg.
- The wall should be at least 1/2 inches thick.

### How to install the electric fan on the wall

 - Make a mark of the holdfast on the wall where you want to install the electric fan, and drill the hole accordingly.
- Insert the wall anchors into the holes.
- Install the holdfast on the wall by fixing it tightly with 2 screws.
- Hang the electric fan on the holdfast. Make sure that the guiding slot is fit perfectly on the holdfast.
- Tighten the screws to fit the electric fan with the holdfast.

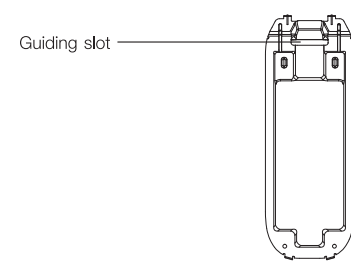

### Section view of the wall

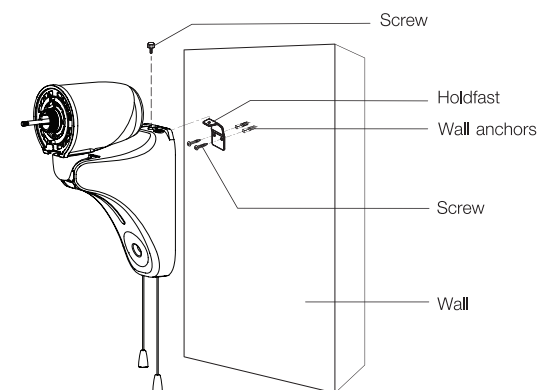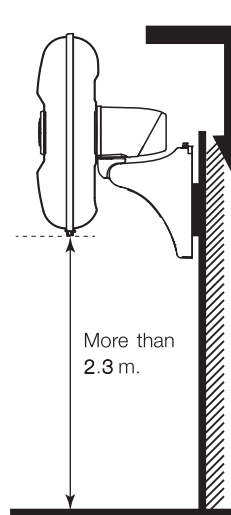  


## USE INDICATION

Be sure that the rated voltage is 220V only before use.

1. Plug in tightly.
2. Pull ON-OFF String to turn on, turn off, and to adjust the electric fan speed.

SWITCH	WIND LEVELS
0	Stop operation
1	Light wind
2	Medium wind
3	Heavy wind

 
### Swing control

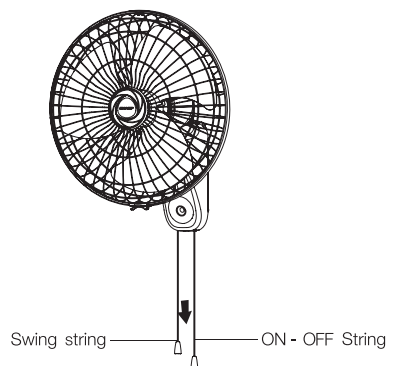

Pull swing string to let the electric fan swing left right and pull this string once again when you would like the electric fan to stop swing.

### Swing direction

 Press or push the motor unit up or down.

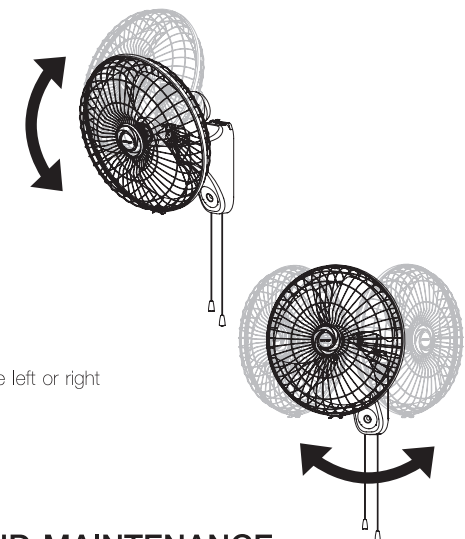

Push the motor unit to the left or right direction in 3 strokes.

## CLEANING AND MAINTENANCE

Unplug every time before start to clean the part.

**Blade, front grille and rear grille**

- Disassemble, and wipe with damp cloth use cleaning agent mixed with water then dried up with the cloth.

**Body**

- Wipe with damp cloth using water or mild soapy liquid.

**Remark**

- Do not wet electric parts or motor.
- Do not clean with chemical substance, thinner and kerosene etc, as this might damage the surface and shape of unit.

Sole Distributor in Thailand

 


**THAI CITY ELECTRIC CO., LTD.**  
1643/4 New Petchburi Rd., Makkasan, Ratchathewi, Bangkok 10400  
Tel. 0 2333 3111 Call Center 0 2254 5000  
E-mail : callcenter@thaicity.co.th

คิดบวก ทำบวก  
เพื่อเด็กฯ และสังคมไทย  
WWW.THAI-CITY-SOCIAL.COM

www.thaicity.co.th  
www.sharp-weecub.com  
www.facebook.com/sharpweecub

# SHARP OPERATION MANUAL

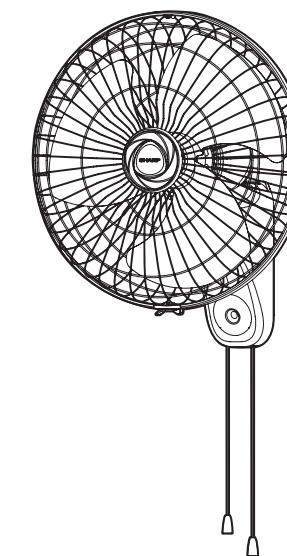

## ELECTRIC FAN MODEL PJ-WA181

CONTENTS	PAGE
USAGE PRECAUTIONS	8
DESCRIPTION OF PARTS	9
SPECIFIC INFORMATION	9
BLADE AND GRILL	10
ASSEMBLING PROCESS	
INSTALLATION GUIDE	11
USE INDICATION	12
CLEANING AND MAINTENANCE	13

Please see the date of manufacture marked on the product. Thank you for your trust in products of Thai City Electric Co., Ltd. In order to use electric fan in efficiency way. Please read the instructions manual carefully before using this appliance.