

SHARP

OPERATION MANUAL



ELECTRIC JAR RICE COOKER
CLASSIC SERIES “S”
MODEL KS-1800
KS-1800T

CONTENTS	PAGE
USAGE PRECAUTIONS	10-11
DESCRIPTION OF PARTS	12
SPECIFIC INFORMATION	13
HOW TO USE	13-14
EARTH WIRE ASSEMBLY	15
CLEANING AND MAINTENANCE	16

Please see the date of manufacture marked on the product
Thank you for your trust in products of Thai City Electric Co., Ltd.
In order to use electric jar rice cooker in efficiency way. Please
read the instructions manual carefully before using this appliance.

REV.1-2560

USAGE PRECAUTIONS

Please read the warning and cautions carefully before using
this appliance and comply strictly for your own safety and to
prevent the damage that may occur on your property.

WARNING

1 Do not immerse the set in water or
sprinkling water on the heater plate.



2 Do not use the cooker on a wet floor,
under direct sunlight or near the
gas stove.



3 While cooking, do not put the rice cooker on or near
combustible materials such as curtains or vinyl carpets.

4 During or immediately after cooking, the
areas near the steam vent hole are kept
at high temperature. Do not touch those
areas to avoid burns.



5 Do not place a wiping cloth or the like on the lid or the handle
during use.

6 Never connect the plug with your wet hand as it may be
dangerous from electric leakage. Disconnect the plug from
the wall outlet when you do not use the rice cooker.

CAUTIONS

1 Insert the plug into the wall outlet firmly and when disconnecting,
hold the plug and pull it out without touching the power cord.

2 Do not give strong vibration or impact during cooking. It may
cause an irregular operation of thermostat to lead to poor
rice-cooking.

3 Do not use the inner pot with other heating appliances such
as a gas stove. The inner pot may be transformed and it may
cause poor cooking result.

10

1. The appliance is to be supplied through a residual current device (RCD)
having a rated residual operating current not exceeding 30 mA.
2. This appliance is considered to be suitable for use in countries having a
warm damp equable climate. It may also be used in other countries.

7 Do not use any other inner pot except the provided one.

8 Keep the rice cooker out of the children's reach, especially
when cooking rice.

9 Never share the wall outlet with other appliances.

10 Do not opening the lid when during boiling because touched
hot steam.

11 Do not disassemble or repair the cooker by yourself. It may cause
trouble such as a fire or electric shock. Consult your nearest dealer.

 
 
12 In case the power cord is broken, it must be replaced by
manufacturer or appointed service providers or equivalent
professionals to avoid any damages.

4 Do not use metal spoon that can scratch the inner pot.

5 Always keep clean the flange part and the bottom of the inner pot,
the heater plate and the inner lid, etc. so that they do not
accumulate rice grain or foreign matter.

11

DESCRIPTION OF PARTS

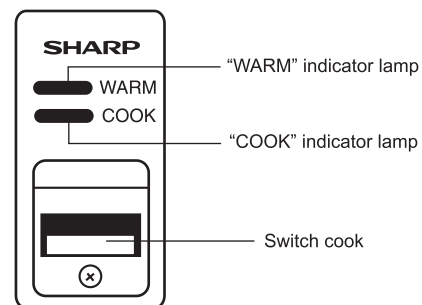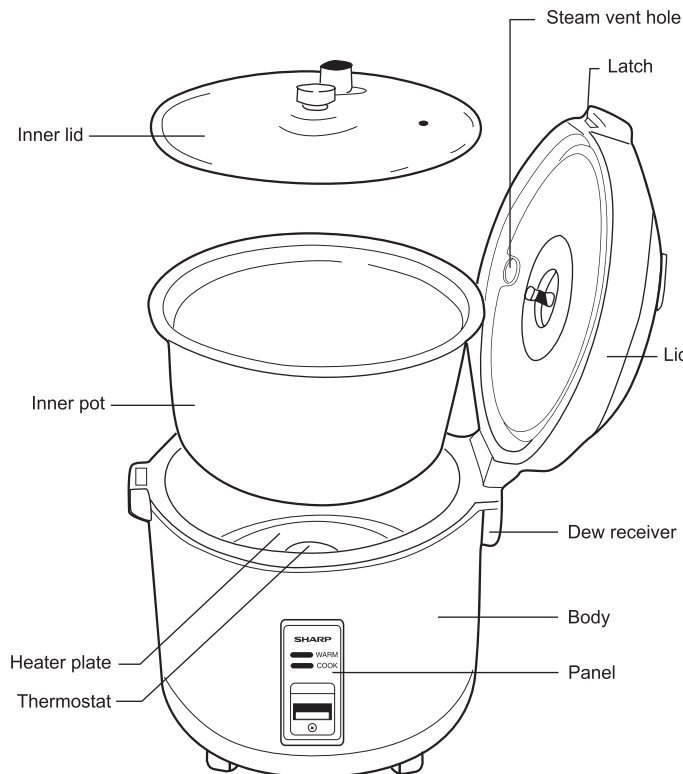

12

SPECIFIC INFORMATION

MODEL	KS-1800	KS-1800T
Rated voltage (V)	220	
Rated frequency (Hz)	50	
Power consumption (W)	Cook	600
	Warm	60
Capacity (ℓ)	0.54-1.8	
Outside dimension (mm.)	W	316
	H	315
	D	290
Weight (kg)	3.1	
Safety system	Thermal fuse	
Accessories	Measuring cup	

* Detail is subject to change without prior notice.

HOW TO USE

Be sure that the rated voltage is 220V only before use.

- 1 Measure the volume of rice correctly.
(The volume of the attached measuring cup is about 0.18 ℓ or 180 cc.)

 


- 2 Wash the rice in a separate bowl, put the rice into the inner pot
and add water.

- 3 Place rinsed rice into the inner pot and pour water at its level.

Example

- To cook 6 cups rice, pour water to level of 6.

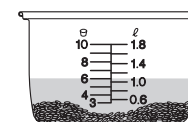


13


- 4 Place the inner pot on the heater plate correctly by turning it
slightly from left and right.

Note

 - Before putting in, wipe off the moisture,
dirt or rice grains on the outside
of the inner pot or surface the
heater plate.

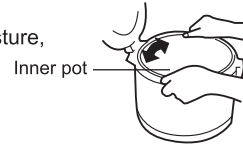

 
- 5 Insert the steam tube of the inner lid into the steam vent hole of
the lid cover. Close the lid firmly.

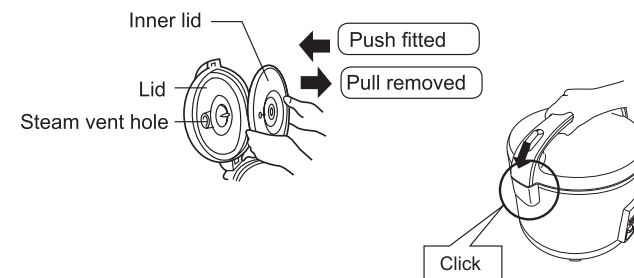

- 6 Pull out the plug and insert the plug into the wall outlet.
Do not overdraw beyond the red mark.

Retracting

 
- Pull the plug out a little and it automatically reels in.

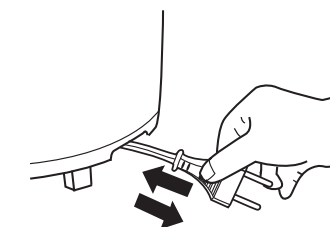

- 7 Push the switch cook.

Note

 - When cooking is over, the “COOK” indicator lamp goes
off and then the “WARM” indicator lamp lights on to start
steaming. Keep on steaming without opening the lid for
about 10-15 minutes for tastier and softer rice.

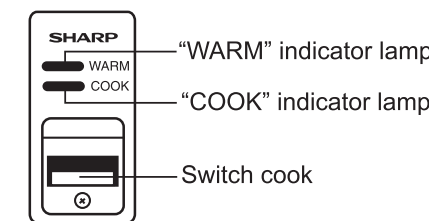


- Do not leave the plastic spoon in the inner.

- 8 Disconnect the plug from the wall outlet every time after use.

14

EARTH WIRE ASSEMBLY

 1. Unplug before assemble the earth wire.
2. Remove the inner pot from the rice cooker.
3. Upside down the rice cooker.
4. Remove the screw for earth wire about 2-3 mm. (Symbol ⊥)
and insert earth wire ass'y and fasten screw for earth wire.

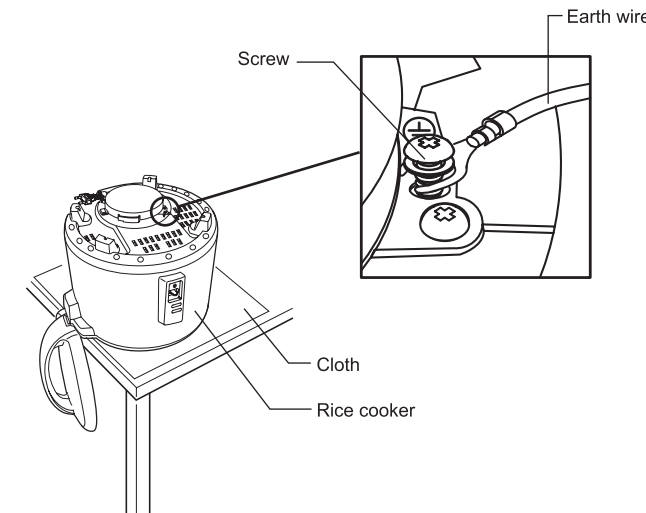

SPECIFICATIONS

Warming system

- The automatic warming system will start. The heat will be spreaded
throughout the rice. The system will keep the rice temperature
during 70-76°C that will make cooked rice warm and tasty.
- Safety with the thermal fuse system.

For model KS-1800T

- The inner pot with poly-flon coat.

Note

If the cooked rice is cold and needs warming, unfasten the rice and
sprinkle some water on the rice, push switch cook and wait until
“COOK” indicator lamp goes off, then the “WARM” indicator lamp lights
on. Keep on warming rice to along time, time of warming begin to the
volume of rice.

MANUFACTURED BY FEDERAL ELECTRIC CORP., LTD.
64/1 Moo 4 Kingkaew Rd., Rajathewa, Bangplee, Samutprakarn 10540

15

CLEANING AND MAINTENANCE

After disconnecting the plug from the wall outlet and cooling down the
cooker, start cleaning as shown below.

Parts to clean	How to clean	Caution
HEATER PLATE	Use the damp fine- sandpaper to clean the dirty area and wipe out with sponge or damp cloth, then wipe again with the dry cloth to remove the humidity. 	Rice grains and dusts that attached on the heater plate cause the inefficiently operation of the heat spread between the inner pot and heater plate. This may cause the switch cook stop work before its time and rice is not yet done.
INNER POT AND INNER LID	Soak inner pot and inner lid in lukewarm water and wash with sponge, washing detergent or liquid detergent and then wipe dry cloth.	Using metal-brush or nylon-brush make the inner pot and inner lid surface scratchy and this cause the removal of coating substance and rice attached at the bottom of the inner pot.
BODY AND LID	Wash with sponge and wipe with cloth to dry it.	Do not use metal-brush to clean the body and lid because it will scratch the coating substance of the surface.
DEW RECEIVER	Take off the dew receiver, wash with sponge brush and wipe with cloth to dry it. 	Always clean the dew receiver in order to protect the smell from the remaining materials.

Sole Distributor in Thailand

THAI CITY
ELECTRIC
THAI CITY ELECTRIC CO., LTD.
1043/4 New Petchburi Rd., Makasan, Ratchathewi, Bangkok 10400
Tel. 0 2333 3111 Call Center 0 2254 5000
E-mail : callcenter@thaicity.co.th

คิดบวก ทำบวก
เพื่อเด็กฯ และสังคมไทย
www.thaicity.co.th
www.sharp-weedub.com
www.facebook.com/sharpweedub

16