

USAGE PRECAUTIONS

Please read the warning and cautions carefully before using this appliance and comply strictly for your own safety and to prevent the damage that may occur on your property.


WARNING

- 1 Do not disassemble or repair the electric fan by yourself, it may cause troubles such as a fire of electric shock. Consult your nearest SHARP service center.
- 2 In case the power cord is broken, it must be replaced by SHARP service center to avoid any damages.
- 3 Unplug every time before start to clean the parts or when you do not use the electric fan anymore.
- 4 Do not immerse the electric fan in water or sprinkling water because this could lead to a short circuit or equipments broken.
- 5 Do not insert the finger or any objects through the grille while the blade is rotating.
- 6 Do not spray any vapor or chemicals to the electric fan while the blade is rotating.
- 7 Do not use the electric fan with incomplete or broken parts such as grille or blade, as it may cause injury.

CAUTIONS

- 1 Plug in tightly in order to avoid the plug to be overheated. This can cause the plastic to be melted, and conflagrated. When unplugging, hold only the plug part; do not pull the cable as this may cause the cable broken.
- 2 Do not plug in with the wet hand to prevent any injury from the leaking current.
- 3 While the electric fan is being used, do not plug in the other electric appliances in the same wall outlet as this might cause heat and conflagration respectively.
- 4 Should not use the electric fan close to curtain, mosquito net or any objects which could be pulled to the motor, otherwise this may cause accident and damage.
- 5 Should not use the electric fan at the high temperature place such as placing it close to the stove or the high humidity place, as the unit might be damaged.
- 6 Should not install the electric fan on an incline wall or in a way that the unit is turned downward otherwise the unit may fall down.


DESCRIPTION OF PARTS

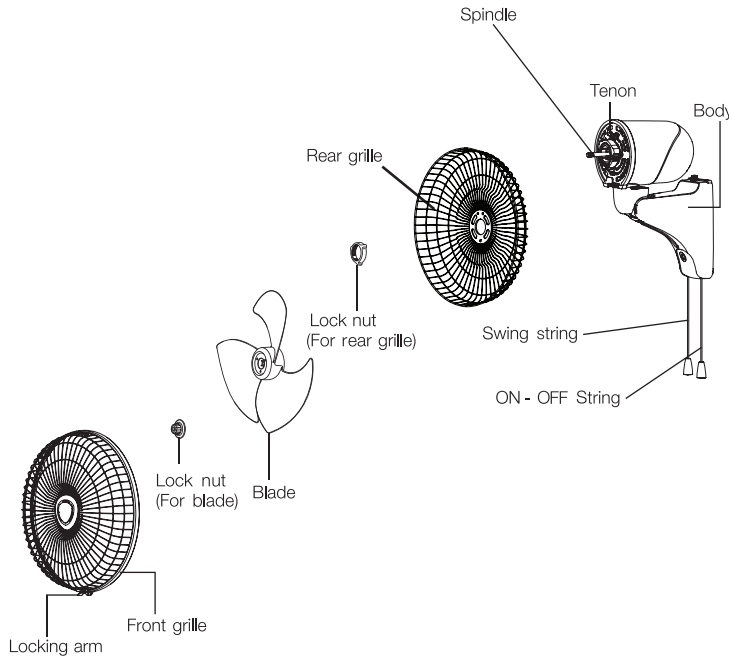

SPECIFIC INFORMATION

MODEL	PJ-WA163
Blade (mm.)	400
Rated voltage (V)	220
Rated frequency (Hz)	50
Power consumption (W)	46
Electric current (A.)	0.21
Insulation class	B
Product dimension (WxHxD) (mm.)	464 x 492 x 340
Net weight (Kgs.)	3.8

BLADE AND GRILLE ASSEMBLING PROCESS

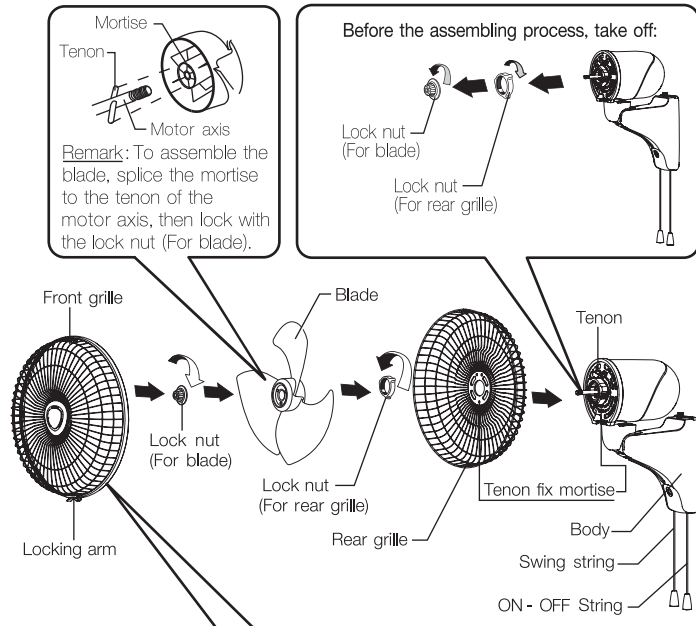

Assemble the front grille.


- 1 Assemble the front grille to the mortise at the rear grille.
- 2 Splice and press both grilles together.
- 3 Push the locking arm to lock.

**CAUTION**  
If the grilles and blade are not tightly assembled, the unit will be shaking.

INSTALLATION GUIDES

Preparation for installation area

- Space needed for installation.



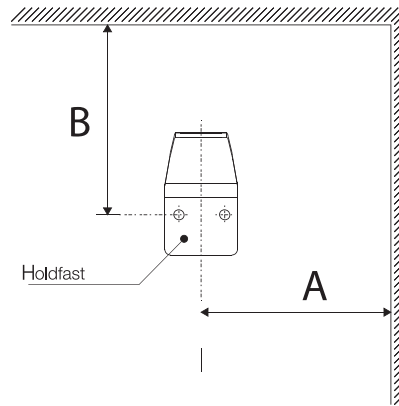


The distance from wall (A) is more than 34 cm.  
The distance from ceiling (B) is more than 48 cm.

- The unit should be installed or fixed on the wall with strong structure, which is able to support the fan's weight of not less than 40 kg.
- The wall should be at least 1/2 inches thick.

How to install the electric fan on the wall

- Make a mark of the holdfast on the wall where you want to install the electric fan, and drill the hole accordingly.
- Insert the wall anchors into the holes.
- Install the holdfast on the wall by fixing it tightly with 2 screws.
- Hang the electric fan on the holdfast. Make sure that the guiding slot is fit perfectly on the holdfast.
- Tighten the screws to fit the electric fan with the holdfast.
- The electric fan is to be installed so that the blades are more than 2.3 meters above the floor.

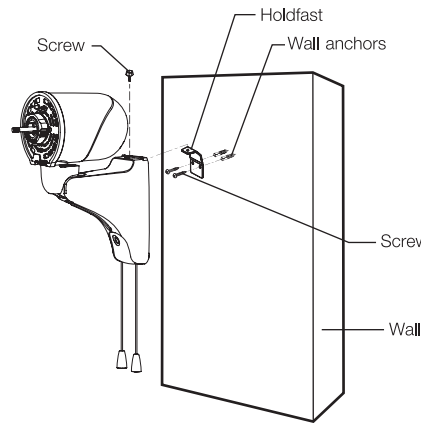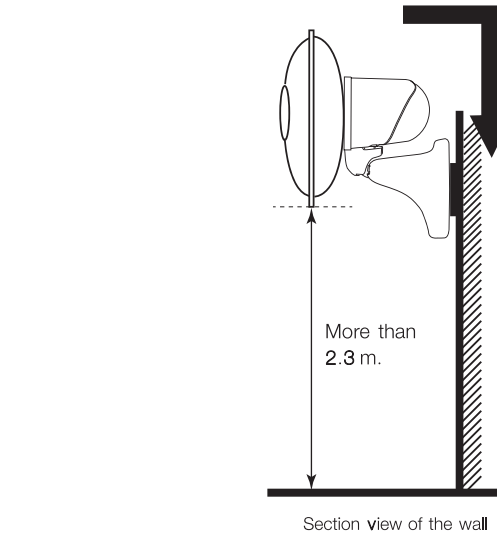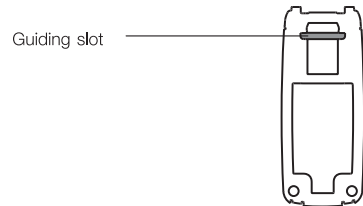


USE INDICATION

Be sure that the rated voltage is 220V only before use.

- 1. Plug in tightly.
- 2. Pull ON-OFF String to turn on, turn off, and to adjust the electric fan speed.

SWITCH	WIND LEVELS
0	Stop operation
1	Light wind
2	Medium wind
3	Heavy wind

Swing control:

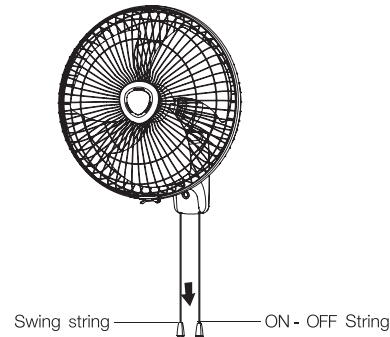


Pull swing string to let the electric fan swing left right and pull this string once again when you would like the electric fan to stop swing.

Swing direction:

Press or push the motor unit up or down.

Push the motor unit to the left or right direction in 3 strokes.

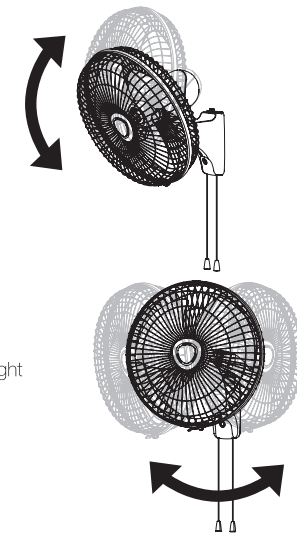

CLEANING AND MAINTENANCE

Blade, front grille and rear grille

- Dissemble, and wipe with damp cloth use cleaning agent mixed with water then dried up with the cloth.

Body

- Wipe with damp cloth using water or mild soapy liquid.

Remark

- Do not wet electric parts or motor.
- Do not clean with chemical substance, thinner and kerosene etc., as this might damage the surface and/or shape of unit.

Sole Distributor in Thailand

 


THAI CITY ELECTRIC CO., LTD.  
1643/4 New Petchburi Rd., Makkasani, Ratchathewi, Bangkok 10400  
Tel. 0 2333 31111 Call Center 0 2254 5000  
E-mail : callcenter@thaicity.co.th

คิดบวก ทำบวก  
เพื่อเด็ก ๆ และสังคมไทย  
WWW.THACITYSOCIALLY.COM

www.thaicity.co.th  
www.sharp-weecub.com  
www.facebook.com/sharpweecub

SHARP  
OPERATION MANUAL

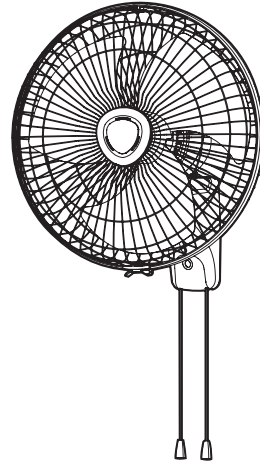

ELECTRIC FAN  
MODEL PJ-WA163

CONTENTS	PAGE
USAGE PRECAUTIONS	8
DESCRIPTION OF PARTS	9
SPECIFIC INFORMATION	9
BLADE AND GRILL	10
ASSEMBLING PROCESS	
INSTALLATION GUIDE	11
USE INDICATION	12
CLEANING AND MAINTENANCE	13

Please see the date of manufacture marked on the product  
Thank you for your trust in products of Thai City Electric Co., Ltd.  
In order to use electric fan in efficiency way. Please read the instructions manual carefully before using this appliance.

REV.3-2561