

USAGE PRECAUTIONS

Please read the warning and cautions carefully before using this appliance and comply strictly for your own safety and to prevent the damage that may occur on your property.

- The appliance is to be supplied through a residual current device(RCD) having a rated residual operating current not exceeding 30 mA.
- This appliance is considered to be suitable for use in countries having a warm damp equable climate. It may also be used in other countries.

WARNING


- Children being supervised not to play with the appliance.
- In case the power cord is broken, it must be replaced by manufacturer or appointed service providers or equivalent professionals to avoid any damages.
- Do not use the nylon scrubbing brush, thinner or alcohol to polish the iron.
- When you have finished ironing and even when you leave the iron for a short while, adjust to low temperature and put it on the iron stand.
- The appliance is not to be used by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.
- If the iron is wrong operating, never repair by yourself. For safety and efficient use, contact your nearest service center approved by SHARP.
- Do not leave the iron unattended while it is connected to the mains supply.
- After use, turn off iron and unplug.
- Never connect the plug with your wet hand as it may be dangerous from electric leakage.
- Do not immerse the set in water, it may cause electric leakage or damage of the electric iron.
- Never share the wall outlet with other appliances.
- The iron must be used and rested on a stable surface.
- When placing the iron on its stand, ensure that the surface on which the stand is placed is stable.
- The iron is not to be used if it has been dropped, if there are visible signs of damage or if it is leaking.

CAUTIONS

- Insert the plug into the wall outlet firmly and when disconnecting, hold the plug and pull it out without touching the power cord.
- Use the iron with floor smooth.
- Don't place the iron on the hard or shape parts of cloth such as zipper, button, etc.

6

DESCRIPTION OF PARTS

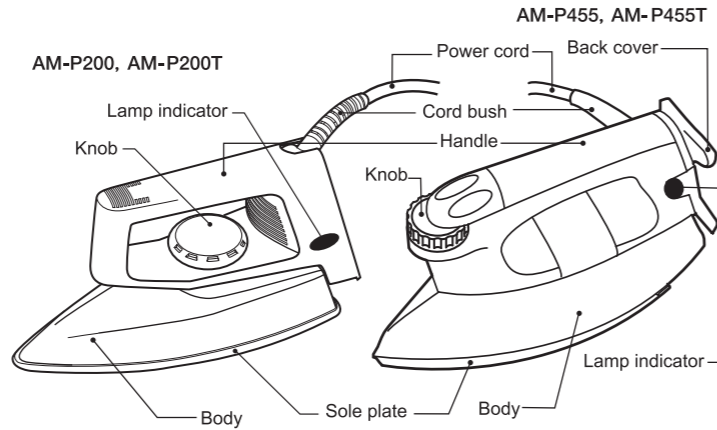

Note

Model AM-P455, AM-P455T, lamp indicator can be adjust left and right.

SPECIFIC INFORMATION

| MODEL | AM-P200 | AM-P200T | AM-P455 | AM-P455T |
|-------------------------------------|-----------------|----------|-----------------|----------|
| Rated voltage (V) | 220 | | | |
| Rated frequency (Hz) | 50 | | | |
| Power consumption (W) | 1,000 | | | |
| Outside dimension (W x H x L) (mm.) | 117 x 106 x 217 | | 105 x 110 x 250 | |

HOW TO USE

Be sure that the rated voltage is 220V only before use.

- Put the iron on its heel.
- Turn the knob to the OFF position.
- Insert the plug securely into the wall outlet and select desired power level, suitable to fabric.

| Position | Fabric |
|--------------------------|-----------------------|
| A (Synthetic) | Synthetic, Acrylic |
| B (Nylon, Silk) | Silk, Rayon and Nylon |
| C (Wool) | Wool, Felt |
| D (Cotton, Linen) | Cotton and Linen |

7

Wait for 2 minutes to warm. If uncertain of cloth fabric to iron, start at the seam of cloth. If the iron sticks to the cloth, hurry to take the iron away. Then turn the knob to lower level before ironing with high power level.

- Lamp indicator will lights up when adjusting to desired power level and will go off when power level is working.
(The iron heats up quickly : begin by ironing those fabrics that are ironed at low temperatures)
- After use, turn the knob to the "OFF" position before pulling out the plug from the wall outlet.

BEFORE FIRST USE

- Remove any sticker from the sole plate and clean it with a soft cloth.
- The iron may give out some smoke when using it for the first time. After a short while this will cease.

THE SPECIAL FEATURE

Model : AM-P200T, AM-P455T

The iron surface is coated with POLY-FLON, which is heat resistant, harmless to health and easy for cleaning.

RECOMMENDATION FOR ENERGY SAVING

- A lot of clothes should be ironed at one time.
- Start ironing the articles that require the lowest ironing temperature, such as those made or synthetic fibers.
- Try to iron quickly with less time by :
 - Selecting suitable power level that helps iron clothes smoothly.
 - Sprinkling clothes with water that helps iron clothes quickly.
 - While washing and parching clothes, try not to crumple cloth that helps time save to iron.
- Plug off the iron before finishing 2-3 minutes.
- Should not use the iron in air-condition room.

8

CLEANING AND MAINTENANCE


- Powder stain can easily be removed by dipping a soft cloth in vinegar and wiping the surface of iron.
- Keep the sole plate smooth avoid hard contact with metal objects.
- After use, disconnect the plug from the wall outlet and put iron its heel then let it cool down.
- Check the power cord for damage.

INITIAL INSPECTIONS

| Problem | Check |
|---|--|
| 1. If the iron is not hot. | <ul style="list-style-type: none"> Whether there is no electricity in the wall outlet. Whether the power cord or plug is out of order. |
| 2. If iron is stuck on cloth while ironing. | <ul style="list-style-type: none"> Iron's surface is dirty or not. Set the power level unsuitable to the cloth fabric. |

SHARP

OPERATION MANUAL

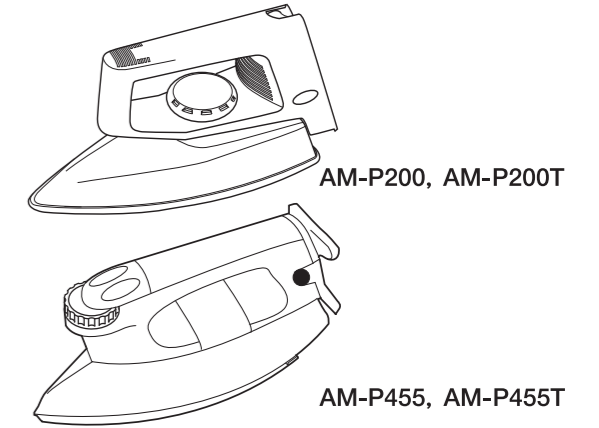

ELECTRIC IRON

MODEL AM-P200, AM-P200T
AM-P455, AM-P455T

| CONTENTS | PAGE |
|----------------------------------|------|
| USAGE PRECAUTIONS | 6 |
| DESCRIPTION OF PARTS | 7 |
| SPECIFIC INFORMATION | 7 |
| HOW TO USE | 7-8 |
| BEFORE FIRST USE | 8 |
| THE SPECIAL FEATURE | 8 |
| RECOMMENDATION FOR ENERGY SAVING | 8 |
| CLEANING AND MAINTENANCE | 9 |
| INITIAL INSPECTIONS | 9 |

Please see the date of manufacture marked on the product
Thank you for your trust in products of Thai City Electric Co., Ltd.
In order to use electric iron in efficiency way. Please read the instructions manual carefully before using this appliance.

REV.1-2560

Sole Distributor in Thailand

คิดบวก ทำบวก
เพื่อเด็กฯ และสังคมไทย
WWW.THAI-CITY4SOCIAL.COM

MANUFACTURED BY FEDERAL ELECTRIC CORP., LTD.
64/1 Moo 4 Kingkaew Rd., Rajatheva, Bangplee, Samutprakarn 10540



THAI CITY ELECTRIC CO., LTD.
1643/4 New Petchburi Rd., Makkasan, Ratchathewi, Bangkok 10400
Tel. 0 2333 3111 Call Center 0 2254 5000
E-mail : callcenter@thaicity.co.th

www.thaicity.co.th
www.sharp-weeclub.com
www.facebook.com/sharpweeclub

9