

## USAGE PRECAUTIONS

Please read the warning and cautions carefully before using this appliance and comply strictly for your own safety and to prevent the damage that may occur on your property.

 
 
 
### WARNING

- 1 If the electric fan is wrong operating, never repair by yourself. For safety and efficient use, contact your nearest service center approved by SHARP.
- 2 In case the power cord is broken, it must be replaced by SHARP service center to avoid any damages.
- 3 Unplug every time before start to clean the parts or when you do not use the electric fan anymore.
- 4 Do not immerse the electric fan in water or sprinkling water because this could lead to a short circuit or equipments broken.
- 5 Do not insert the finger or any objects through the grille while the blade is rotating.
- 6 Do not spray any vapor or chemicals to the electric fan while the blade is rotating.
- 7 Do not use the electric fan with incomplete or broken parts such as grille or blade, as it may cause injury.

### CAUTIONS

- 1 Plug in tightly in order to avoid the plug to be overheated. This can cause the plastic to be melted, and conflagrated. When unplugging, hold only the plug part; do not pull the cable as this may cause the cable broken.
- 2 Never connect the plug with your wet hand as it may be dangerous from electric leakage.
- 3 Never share the wall outlet with other appliances.
- 4 Should not use the electric fan close to curtain, mosquito net or any objects which could be pulled to the motor, otherwise this may cause accident and damage.
- 5 Should not use the electric fan at the high temperature place such as placing it close to the stove or the high humidity place, as the unit might be damaged.
- 6 Should not place the electric fan on the hot or sloped floor, as the unit might be damaged.

## DESCRIPTION OF PARTS

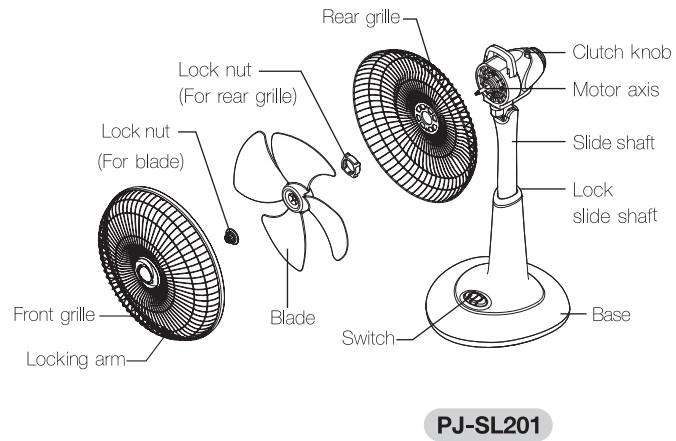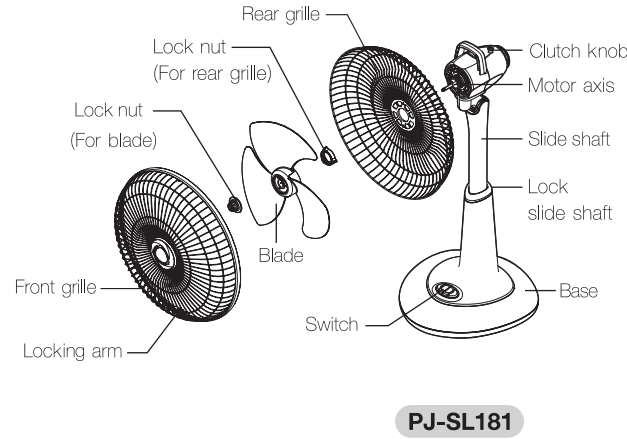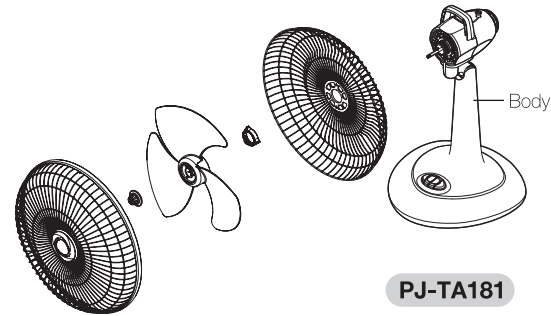


## SPECIFIC INFORMATION

MODEL	PJ-TA181	PJ-SL181	PJ-SL201
Blade (mm.)	450		508
Rated voltage (V)	220		
Rated frequency (Hz)	50		
Power consumption (W)	67		140
Rated current (A)	0.30		0.60
Insulation class	B		
Outside dimension (W x H x D) (mm.)	513x835x422	513x980-1,180x459	574x1,014-1,214x459
Weight (kg)	5.8	6.5	8.2

\*Detail is subject to change without prior notice.


## ASSEMBLING THE ELECTRIC FAN

 Installation the body onto the base.

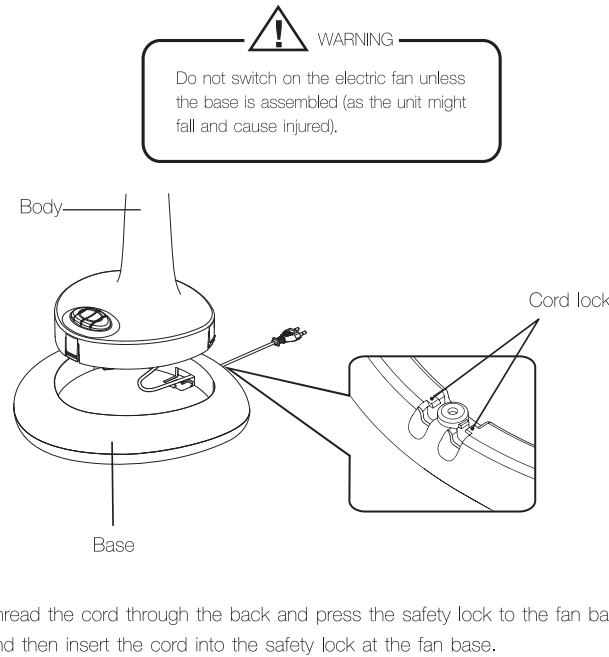

Thread the cord through the back and press the safety lock to the fan base, and then insert the cord into the safety lock at the fan base.

## BLADE AND GRILLE ASSEMBLING PROCESS

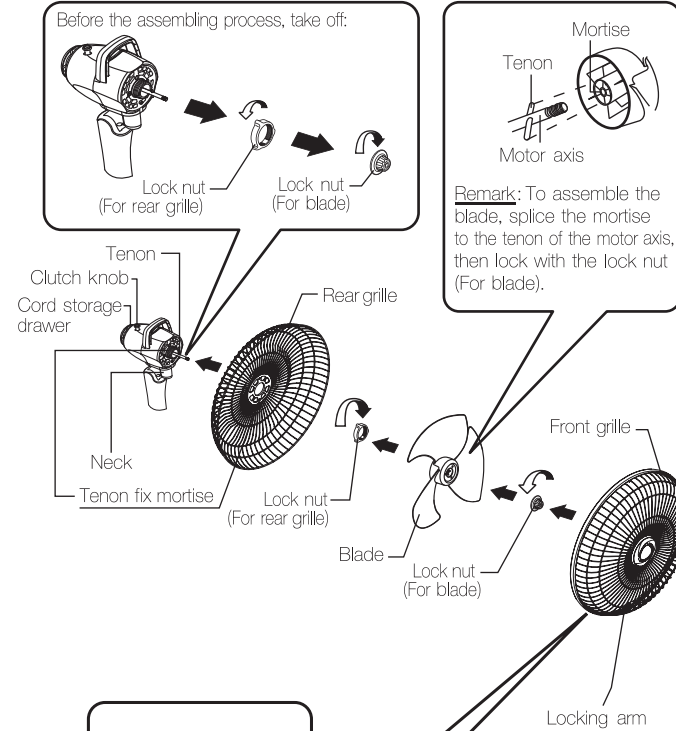 

- 1 Assemble the front grille to the mortise at the rear grille.
- 2 Splice and press both grilles together.
- 3 Push the locking arm to lock.



**CAUTION**  
If the grilles and blade are not tightly assembled, the unit will be shaking.

## HEIGHT ADJUSTMENT
  
### MODEL PJ-SL181, PJ-SL201

The height can be adjusted to 5 levels

- Level up by press and hold the lock slide shaft and at the same time, lift the motor unit or slide shaft up.
- Level down by push the motor unit or slide shaft down.

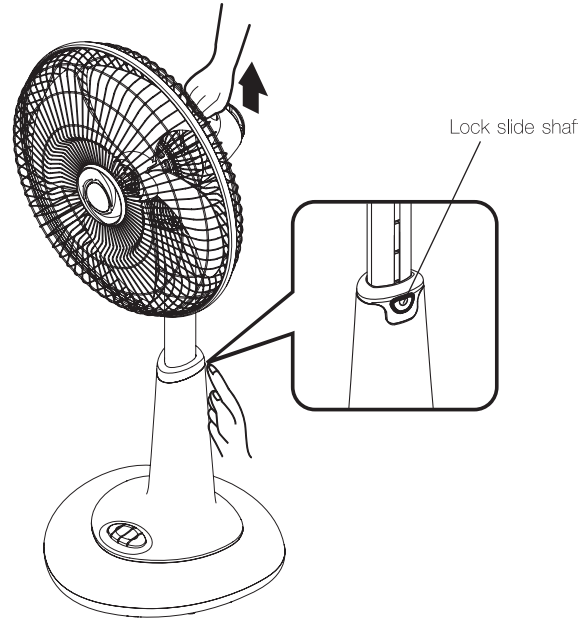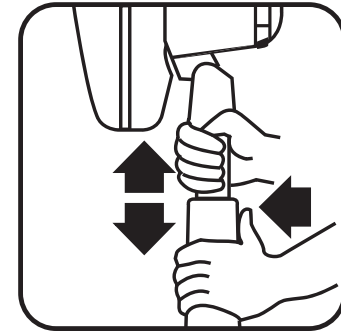

**WARNING : Do not press down while not assembled the grille.**

## USE INDICATION

 
Be sure that the rated voltage is 220V only before use.

- Plug in tightly.
- Push the switch for the desired fan speed.


SWITCH	WIND LEVELS
0	Stop operation
1	Light wind
2	Medium wind
3	Heavy wind

### Swing control

- Push the knob : the unit swings left and right.
- Pull the knob : the unit stop swinging.

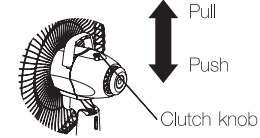


### Swing direction

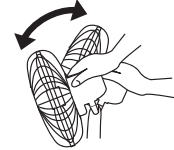 

Press or push the motor unit up or down.



 Push the motor unit to the left or right direction in 5 strokes.

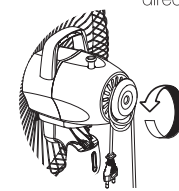

To store the cord, roll the cord around the cord storage at the back of the fan.

## CLEANING AND MAINTENANCE

Unplug every time before start to clean the part.

Blade, front grille and rear grille

- Disassemble, and wipe with damp cloth use cleaning agent mixed with water then dried up with the cloth.

Body

- Wipe with damp cloth using water or mild soapy liquid.

Remark

- Do not wet electric parts or motor.
- Do not clean with chemical substance, thinner and kerosene etc, as this might damage the surface and shape of unit.

คิดบวก ทำบวก  
เพื่อเด็กฯ และสังคมไทย  
www.thaicitysocialclub.com

 
Sole Distributor in Thailand



THAI CITY ELECTRIC CO., LTD.  
1643/4 New Petchburi Rd., Makkasan, Ratchathewi, Bangkok 10400  
Tel. 0 2333 3111 Call Center 0 2254 5000  
E-mail : callcenter@thaicity.co.th

www.thaicity.co.th  
www.sharp-weecub.com  
www.facebook.com/sharpweecub

# SHARP OPERATION MANUAL

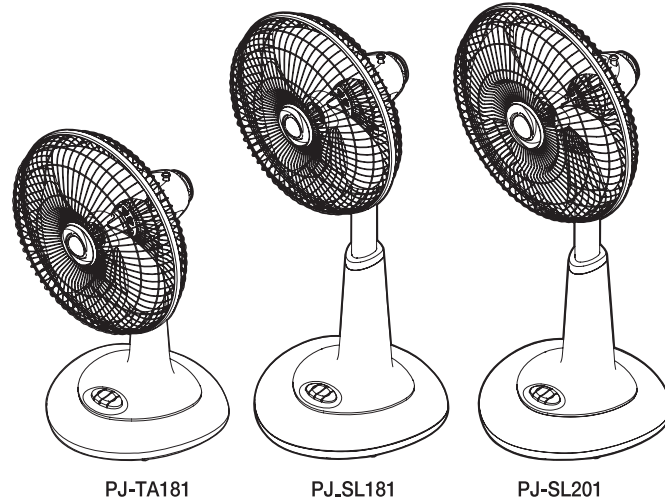

## ELECTRIC FAN MODEL PJ-TA181 PJ-SL181 PJ-SL201

CONTENTS	PAGE
USAGE PRECAUTIONS	8
DESCRIPTION OF PARTS	9
SPECIFIC INFORMATION	10
ASSEMBLING THE ELECTRIC FAN	10
BLADE AND GRILLE	11
ASSEMBLING PROCESS	
HEIGHT ADJUSTMENT	12
USE INDICATION	13
CLEANING AND MAINTENANCE	13

Please see the date of manufacture marked on the product  
Thank you for your trust in products of Thai City Electric Co., Ltd.  
In order to use electric fan in efficiency way. Please read the instructions manual carefully before using this appliance.

REV.2-2561